


## 1-1. Key information

# Keys

The following keys are provided with the vehicle.

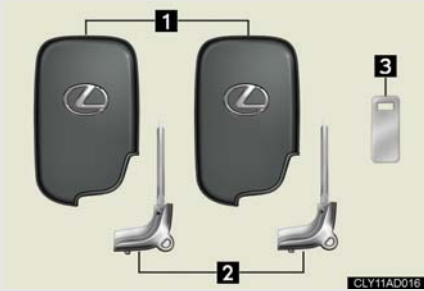

### 1 Electronic keys

- Operating the smart access system with push-button start system (→P. 5)
- Operating the wireless remote control function (→P. 19)

### 2 Mechanical keys

### 3 Key number plate

## ■ Card key (if equipped)



### 1 Electronic key

Operating the smart access system with push-button start system (→P. 5)

### 2 Mechanical key

## Using the mechanical key



### Take out the mechanical key.

The mechanical key can only be inserted in one direction, as the key only has grooves on one side. If the key cannot be inserted in a lock cylinder, turn it over and re-attempt to insert it.

### ■ Card key

- The mechanical key that is stored inside the card key should be used only in an emergency, such as when the key battery is depleted.
- If it is difficult to take out the mechanical key, push down the lock release button using a pen tip etc.



- To store the mechanical key in the card key, insert it inside while pressing the lock release button.

- The card key is not waterproof.

### ■ When required to leave a key to the vehicle with a parking attendant

Turn the trunk opener main switch OFF and lock the glove box and the trunk storage extension as circumstances demand. (→P. 27, 413, 449)

Remove the mechanical key for your own use and provide the attendant with the electronic key only.

### ■ Key number plate

Keep the plate in a safe place such as your wallet, not in the vehicle. In the event that a mechanical key is lost, a new key can be made at your Lexus dealer using the key number plate. (→P. 593)

### NOTICE

#### ■ To prevent key damage

- Do not subject the keys to strong shocks, expose them to high temperatures by placing them in direct sunlight, or get them wet.
- Do not expose the keys to electromagnetic materials or attach any material that blocks electromagnetic waves to the key surface.